

Архангельск (8182)63-90-72
 Астана (7172)727-132
 Астрахань (8512)99-46-04
 Барнаул (3852)73-04-60
 Белгород (4722)40-23-64
 Брянск (4832)59-03-52
 Владивосток (423)249-28-31
 Волгоград (844)278-03-48
 Вологда (8172)26-41-59
 Воронеж (473)204-51-73
 Екатеринбург (343)384-55-89


Иваново (4932)77-34-06
 Ижевск (3412)26-03-58
 Казань (843)206-01-48
 Калининград (4012)72-03-81
 Калуга (4842)92-23-67
 Кемерово (3842)65-04-62
 Киров (8332)68-02-04
 Краснодар (861)203-40-90
 Красноярск (391)204-63-61
 Курск (4712)77-13-04
 Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
 Москва (495)268-04-70
 Мурманск (8152)59-64-93
 Набережные Челны (8552)20-53-41
 Нижний Новгород (831)429-08-12
 Новокузнецк (3843)20-46-81
 Новосибирск (383)227-86-73
 Омск (3812)21-46-40
 Орел (4862)44-53-42
 Оренбург (3532)37-68-04
 Пенза (8412)22-31-16

Пермь (342)205-81-47
 Ростов-на-Дону (863)308-18-15
 Рязань (4912)46-61-64
 Самара (846)206-03-16
 Санкт-Петербург (812)309-46-40
 Саратов (845)249-38-78
 Севастополь (8692)22-31-93
 Симферополь (3652)67-13-56
 Смоленск (4812)29-41-54
 Сочи (862)225-72-31
 Ставрополь (8652)20-65-13

Сургут (3462)77-98-35
 Тверь (4822)63-31-35
 Томск (3822)98-41-53
 Тула (4872)74-02-29
 Тюмень (3452)66-21-18
 Ульяновск (8422)24-23-59
 Уфа (347)229-48-12
 Хабаровск (4212)92-98-04
 Челябинск (351)202-03-61
 Череповец (8202)49-02-64
 Ярославль (4852)69-52-93

Единый адрес: nsv@nt-rt.ru | http://nivus.nt-rt.ru

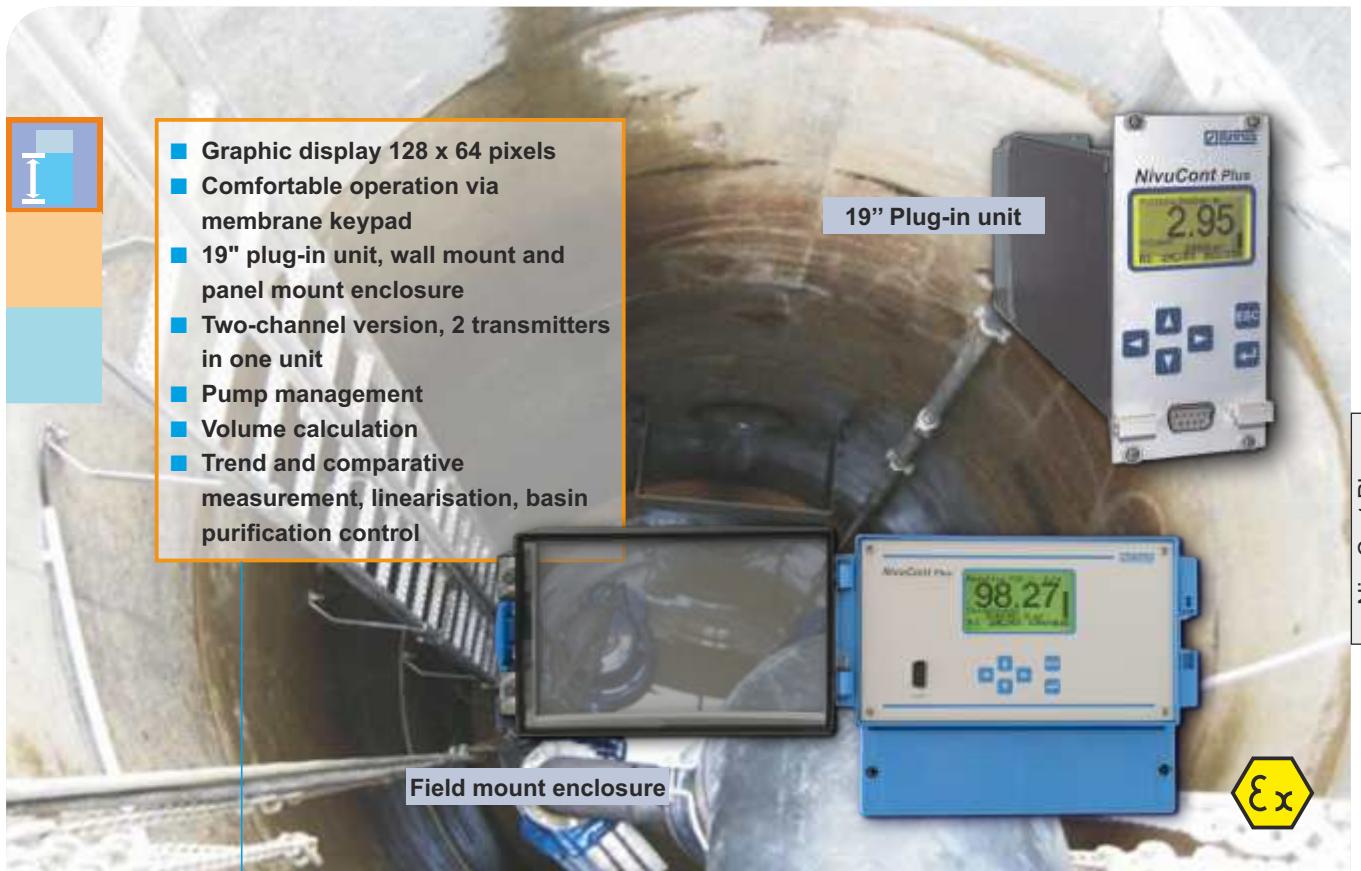

NivuCont Plus

NivuCont Plus

The NivuCont Plus is a multifunctional process measurement transmitter which supplies two-wire and three-wire sensors and records the respective readings.



Due to steadily increasing requirements on automation and surveillance systems a variety of measurement values are needed. These are delivered by various sensors.

NivuCont Plus powers two and three wire sensors and accepts their input. The intrinsically safe sensor power supply for use in Ex zone 0 areas is optionally available. Current input (Live-Zero) monitoring including error messages is carried out.

The unit can be programmed comfortably via 6 keys in dialog with the 128 x 64 pixel graphic display.


Various program parameter lists can be read out and in via PC interface.

Furthermore it is possible to create linkages as well as control and calculating operations between input and output signals regarding level, difference, average value, total value and linearisation, calculation of exponential functions and volumes is possible. Various switching functions including pump control enable universal use.

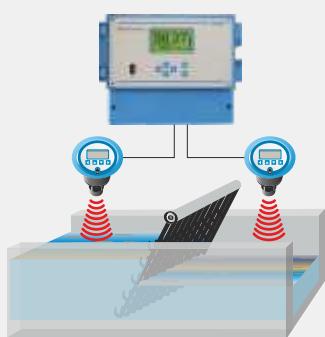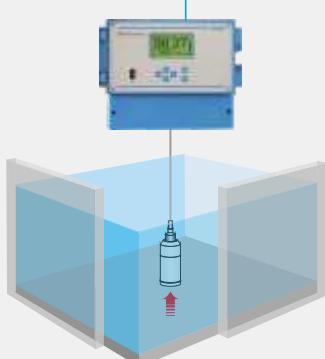

Specifications

Field mount enclosure

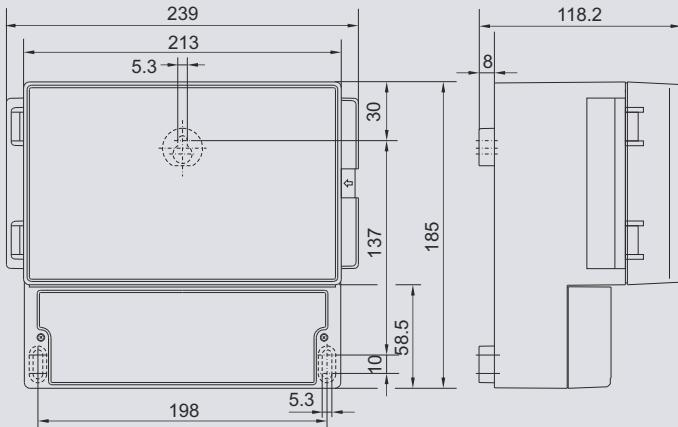


Please observe to have sufficient space (min. 30 mm) on the left-hand side of the transmitter to open the transparent door.


Enclosure also suitable for DIN-rail mounting.

There are six knock-out cable entry glands on transmitter underside (1 x M16, 5 x M20).

Panel mount enclosure

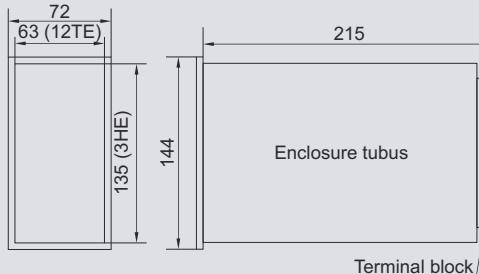

19" Plug-in unit

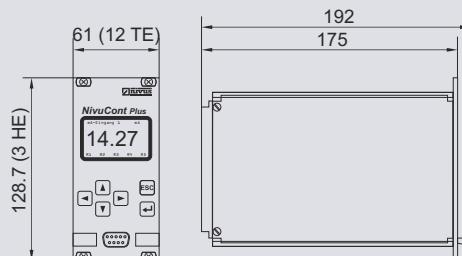

Dimensions in mm

Transmitter

Power supply	• 85 to 264 V AC, 50 to 60 Hz or • 18 - 36 V DC	Inputs (optional)	• analog input 1 and 2 • power supply sensors: 24 V DC Ex: max. 63 mA non-Ex: max. 130 mA
Power consumption	max. 10 VA	Analog output 1	• 0/4-20 mA • load max. 500 Ohm • resolution 12 Bit • galvanically isolated from analog inputs
Enclosure	• material: Polycarbonate • weight, protection: field mount: approx. 1620 g, IP65 panel mount: approx. 1770 g, IP30 19" plug-in unit: approx. 750 g, IP20	Analog output 2 (optional)	see analog output 1
Approval (optional)	II (1) GD [Ex ia] IIC	Relays (optional)	5 relays free programmable • function: SPDT (single pole double throw) • switching voltage: min. 100 mV, max. 250 V AC • contact current: max. 2 A (cos φ 0.9) • contact rating: max. 300 VA
Operating temperature	-20 °C to +60 °C Ex: -20 °C to +40 °C	Measurement uncertainty	• linearity: ±0.1 % of final value • temperature drift: ±0.05 % per 10 K ambient temperature
Storage temperature	-30 °C to +70 °C		
Relative humidity	90 %, non-condensing		
Display	LCD back-lit graphic display, 128 x 64 pixels		
Operation	6 membrane keys, dialog mode in German, English and French		

По вопросам продаж и поддержки обращайтесь:

Архангельск (8182)63-90-72
Астана (7172)727-132
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Оренбург (3532)37-68-04
Пенза (8412)22-31-16

Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13

Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93